


End Closure Panels Information Sheet

Indicative only. End closure panels can be employed with both the SEL Lite and Standard Box Systems.

The End Closure Panels **must not** transfer load in to the spindles.

Top (1.4m) End Closure Panels may be connected using the connectors provided.

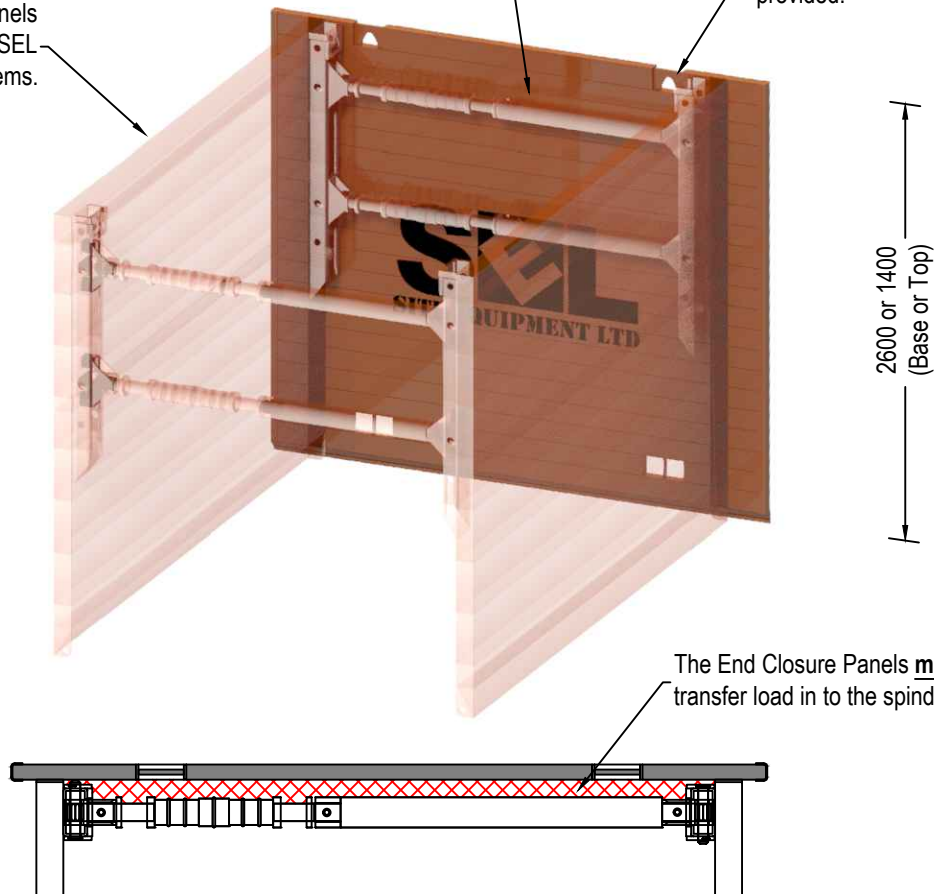

Panel Length	Panel Height	Panel Thickness	Weight	Permissible Earth Pressure
<i>m</i>	<i>m</i>	<i>mm</i>	<i>kg</i>	<i>kN/m²</i>
1.0	2.6 (Base)	60	210	57.0*
1.0	1.4 (Top)	60	135	57.0*
2.0	2.6 (Base)	60	395	57.0*
2.0	1.4 (Top)	60	245	57.0*
2.5	2.6 (Base)	60	490	39.0
2.5	1.4 (Top)	60	300	39.0
3.0	2.6 (Base)	60	585	27.0
3.0	1.4 (Top)	60	355	27.0
3.5	2.6 (Base)	60	680	20.0
3.5	1.4 (Top)	60	410	20.0

*Limited by maximum permissible box pressure, always check permissible pressure against the proposed box system.